


CHEYENNE

THANK YOU FOR
YOUR TRUST


Enjoy your machine

SOL
NOVA UNLIMITED II
2.5 | 3.5 | 4.5


1



2

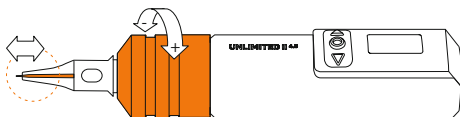

3

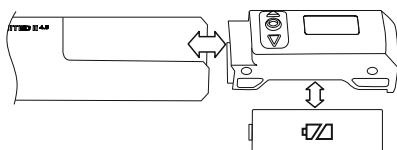

On / Off

Device: press **C**-button ≤ 1 s: on / 3s: off.

Motor: Short press the **C**-button.

Adjust speed value

Short press **◀▶** Button: Steps

Long Press **◀▶** Button: Scroll

Fast switch Motor Mode (device on / motor off)

Press the **O**-button briefly (1x) to toggle Main

Screen to Motor Mode Screen

Press **◀▶** Button to switch mode

Fast access Timer Screen (device on / motor off)

Press the **O**-button briefly (2x) to toggle

Main Screen to Timer Screen

Access / Scrolling Menu (device on / motor off)

Press and hold the **O**-button for access.


Press **◀▶** Button for scrolling.

Press the **O**-button briefly to select.

Gesture speed adjustment

Press and hold the **C**-button or **O**-button and

perform a gesture while the motor is on.

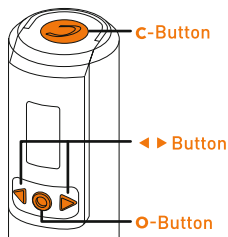

ONLINE MANUAL

SOL NOVA UNLIMITED II

2.5 | 3.5 | 4.5

